

## Cleaning Instructions

1. Ensure the unit is switched off
2. Clean with supplied brush
3. Do not switch on unit while brushing
4. Wipe the body of the unit with a clean dry cloth

## Warnings & Maintenance

1. Keep out of reach of children
2. Do not use this appliance near bathtubs, showers, basins or any vessel containing water
3. Designed for smoothing coarse skin on feet, heels, elbows and knees. Do not use on other parts of the body or soft skin as it may cause injury
4. Do not use on broken or bleeding skin

## Product Specifications

Voltage: DC 6V  
Battery: 3 x AA  
Power: 4W  
Material: ABS



*Mani-Pedi* is brought to you by Medescan Australia

PO Box CP 392 Condell Park Condell Park

info@medescan.com.au  
www.medescan.com.au

Customer service 1300 736 330



New  
2 in 1

*Mani-Pedi*



Please read instructions before use

## Mani-Pedi



## How to Use

### Use on feet, heels, knees and elbows

1. Wash, clean and thoroughly dry the skin
2. Place the desired roller into the *Mani-Pedi*. Please see the images below for instructions on how to change the rollers.
3. Slide the power switch into position 1 for low speed or position 2 for high speed.
4. Use the black coarse roller by gently moving back and forth over the desired area for 2 - 3 seconds at a time. Do not press hard, simply glide over the area. The unit will stop if pressed too hard.
5. Repeat in 2-3 second cycles until the desired effect is reached.
6. Change to the Blue roller for a smoother and less abrasive finish.
7. Rinse the skin or use a wet towel to remove excess dead skin particles.

### Use on nails

1. Change the roller to the nail buffer and polish system
2. For best results, first use the grey nail buffer for 3-5 seconds at a time, gliding over nail left to right.
3. Switch to other side, the white polish roller and gently glide over the nail left to right until you achieve bright shiny nails.



## How to Use



### Changing the Roller

1. Press the roller release button on the side of the *Mani-Pedi*.
2. Gently pull the roller you wish to remove and replace with the desired accessory.

### Changing the Batteries

1. Rotate the battery cover clockwise to loosen and remove.
2. Replace the batteries as per the image below. Please ensure all batteries + terminal pointing up.
3. Replace the battery cover by ensuring the cover shape lines up with the main body shape.
4. Gently push down and twist the battery cover clockwise locking it into position.

